


# Instruction Manual

No-Frost Freezer


**iiglo**<sup>®</sup>

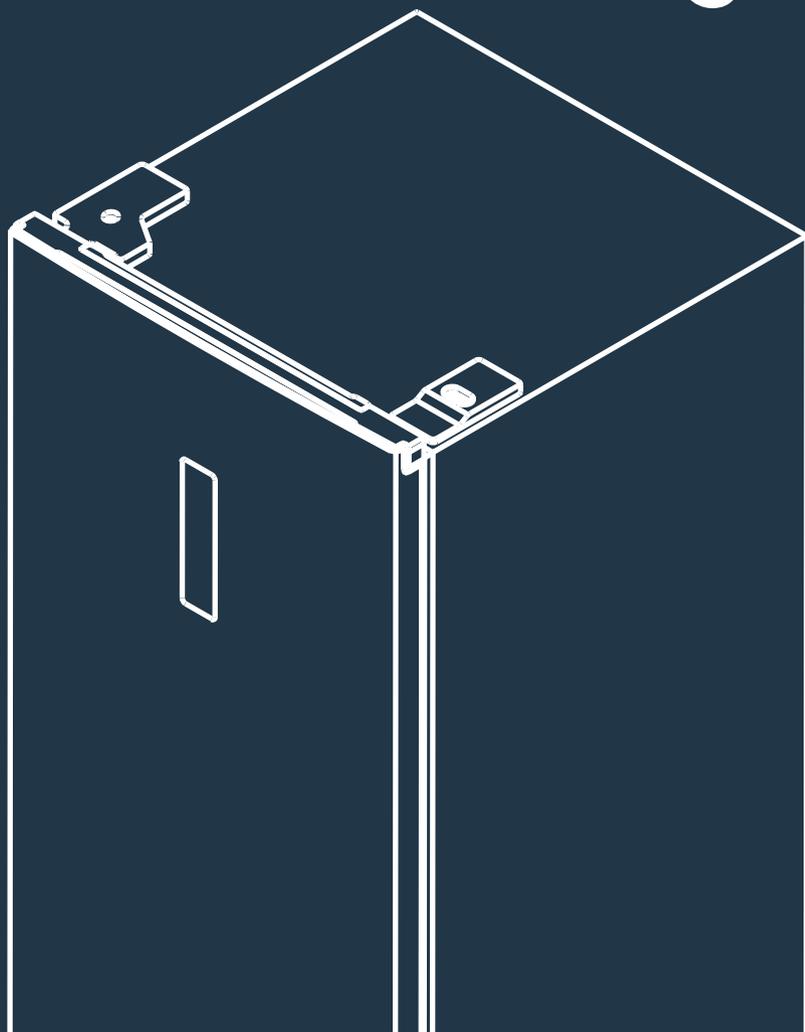


# Installation

## Door Reversibility

Before reversing the door, please be prepared below tools and material: straight screwdriver, cross screwdriver, spanner and the components included in the poly bag.

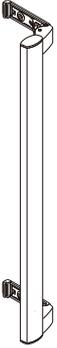

Easy open handle ×1

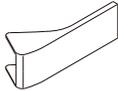


Handle Cover ×2



Screw ×2





Left Aid-Closer ×1


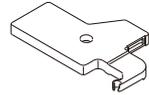


Left Top Hinge Cover ×1

1. Remove upper wire box covers.

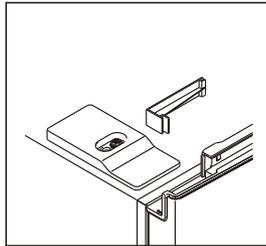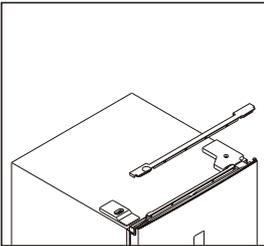


2. Unscrew right top hinge cover, and disconnect connectors of door switch and display.

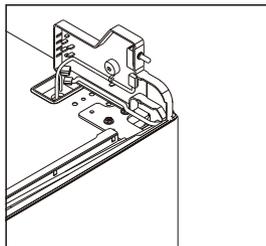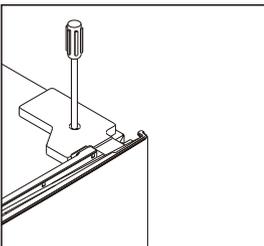


# Installation

---


3. Unscrew and remove the top hinge, and then remove the door.

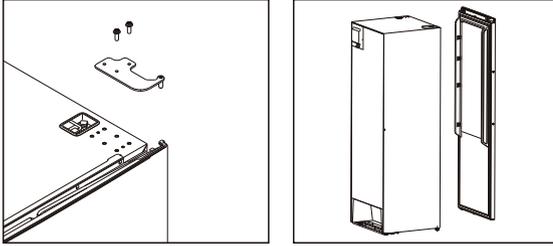


4. Remove the right aid-closer, and take out left aid-closer from accessories bag and install it at left side.

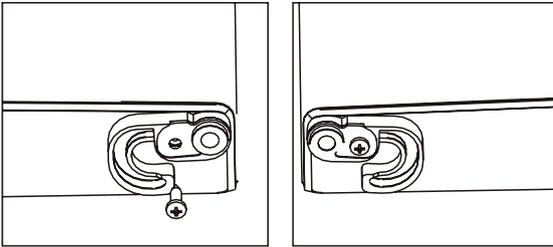

5. Unscrew the bottom hinge, and remove the adjustable foot from the left side to the right side.

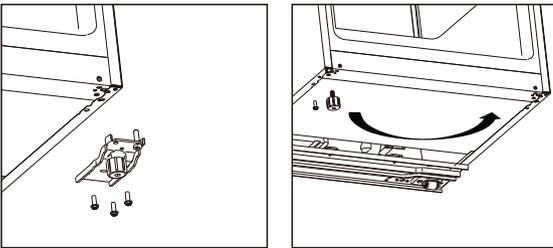

6. Unscrew and move the bottom hinge pin from the right side to the left side, then install the bottom hinge on the left side of the appliance.

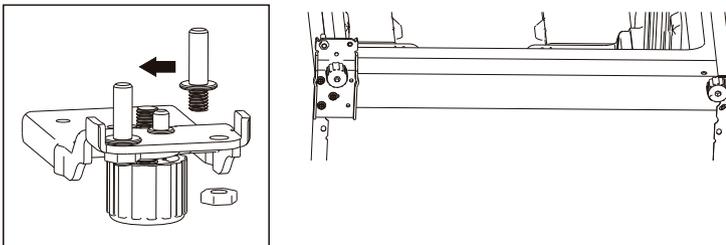


# Installation

---

## Easy open handle installation


1. Remove the screw hole covers.

step 1

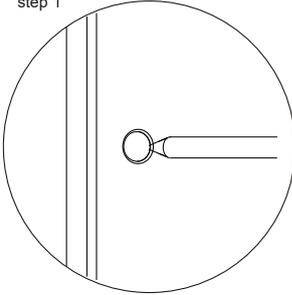


2. Take out the easy open handle which is placed in crisper drawer, and install it.

step 2

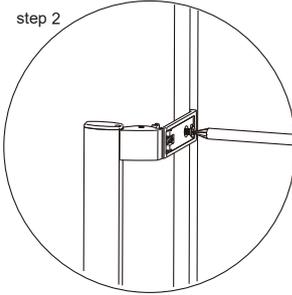

3. Install the easy open handle covers.



step 3

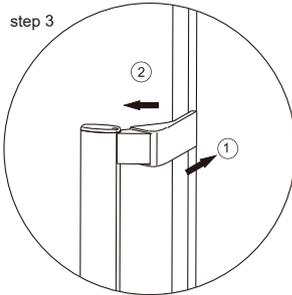

# Installation

## Space Requirement

- Keep enough space of door open.
- It is advisable to keep at least 10mm gap at two sides.

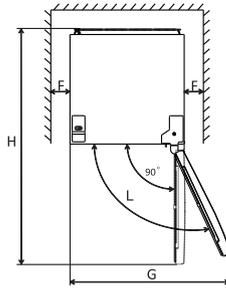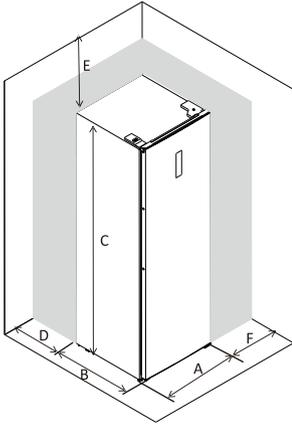



A	600
B	650
C	1850
D	min=50
E	min=50
F	min=50
G	835
H	1323
L	115°

Note: this refrigerating appliance is not intended to be used as a built-in appliance.

## Levelling the unit

To do this adjust the two levelling feet at front of the unit.

If the unit is not level, the doors and magnetic seal alignments will not be covered properly.

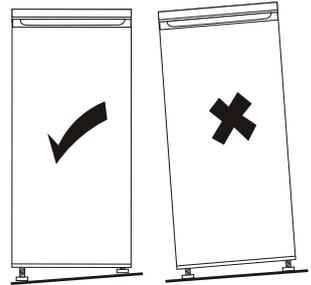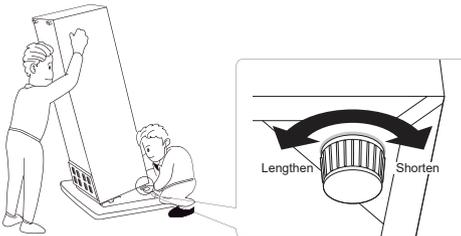


# User interface

---

## Using the Control Panel

### 1.0 User interface introduction

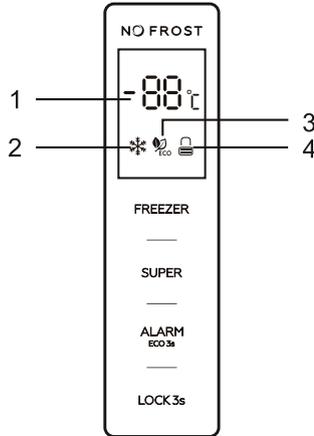

### 1.1 Operation Interface

**FREEZER:** Temperature control of the appliance

**SUPER:** Select and deselect super mode control

**ALARM/ECO:** Clear door opening alarm, select and deselect ECO Mode

**LOCK:** Locking and unlocking

### 1.2 LED Display

1. Display window for preset temperature
2. Super mode icon
3. ECO mode icon
4. Locking and unlocking icon

### 2.0 Illustration of the buttons

All buttons are valid only in unlocking status.

Short beep after per touching of buttons

# User interface

---

## 2.1 FREEZER: temperature control of the appliance available only for user defined mode

Touching "FREEZER" button consecutively, the temperature will change in a circle from -14 °C ~ -22 °C, stop touching and after 5 seconds flashing, temperature is set.

## 2.2 SUPER: select and deselect super mode

Press "SUPER" button to select super mode. After 5 seconds flashing of super mode icon, super mode is selected.

When super mode is selected, super mode icon will light on, and display window will show -25 °C.

In super mode, touching "FREEZER" button, super mode icon will flash 3 times, but freezer temperature can not be changed.

To exit Super mode,

- Press "SUPER" button to deselect Super mode,
- Or after 50 hours of super mode without any operation, the refrigerator will automatically stop it and enter to previous setting.

### Warning:

In super mode, noise of the appliance may be slightly higher than normal running.

## 2.3 ALARM/ECO: clear door opening alarm and high temperature alarm, select and deselect ECO mode

Short touching "ALARM/ECO" button to clear door opening alarm and high temperature alarm.

Touching "ALARM/ECO" button for 3 seconds to select ECO mode. After 5 seconds flashing of ECO mode icon, ECO mode is selected.

When ECO mode is selected, ECO mode icon will light on, and display window will show different preset temperatures, depending on the ambient temperature ( $T_a$ ) of where the appliance be placed, as below.

Ambient Temperature ( $T_a$ )	$T_a \leq 13^\circ\text{C}$	$14^\circ\text{C} < T_a \leq 20^\circ\text{C}$	$21^\circ\text{C} < T_a \leq 27^\circ\text{C}$	$28^\circ\text{C} < T_a \leq 34^\circ\text{C}$	$T_a > 35^\circ\text{C}$
Preset Temperature	-18°C	-18°C	-18°C	-16°C	-15°C

In ECO mode, "FREEZER" button will not respond to any touching.

Touching "ALARM/ECO" button for 3 seconds to deselect ECO mode.

# User interface

---

## 2.4 LOCK: Locking and Unlocking

Touching "**LOCK**" button for 3 seconds to lock the control panel, then the locking and unlocking icon will be "".

In locking status, touch any button, the locking and unlocking icon will flash 3 times.

Touching "**LOCK**" button for 3 seconds to unlock the control panel, then the locking and unlocking icon will be "".

In unlocking status, all buttons are available.

If no operation in 25 seconds, the control panel will be locked automatically.

## 3.0 Door opening alarm

If the door keeps opening for 90 seconds, door opening alarm sounds.

Close the door to stop the door opening alarm.

Or short touching "**ALARM/ECO**" button to clear door opening alarm.

## 4.0 High temperature alarm

If high internal temperature of the appliance is detected, high temperature alarm will sound, "ht" and detected temperature will display alternately on display window.

Short touching "**ALARM/ECO**" button to stop door opening alarm.

High temperature display will disappear automatically only if detected temperature goes back to normal.

# Daily Use

## First use

### Cleaning the interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly.

**Important!** Do not use detergents or abrasive powders, as these will damage the finish.

## Daily use

Position different food in different compartments according to be below table

Freezer drawer(s)/shelf	<ul style="list-style-type: none"><li>• Foods for long-term storage.</li><li>• Bottom drawer/shelf for raw meat, poultry, fish.</li><li>• Middle drawer/shelf for frozen vegetables, chips.</li><li>• Top drawer/shelf for ice cream, frozen fruit, frozen baked goods.</li></ul>
-------------------------	---

## Storing frozen food

When first starting-up or after a period out of use. Before putting the product in the compartment let the appliance run at least 2 hours on the higher settings.

**Important!** In the event of accidental defrosting, for example the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooked).

Temperature setting recommendation: -18°C is recommended.

Under recommended setting, the best storage time of freezer is no more than 1 month.

The best storage time may reduce under other settings.


## Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in the freezer compartment or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.


## Accessories Movable shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

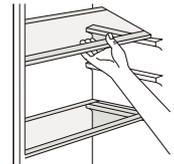

## Positioning the door balconies

Door balconies can be disassembled for cleaning. To make the disassembling as follows: gradually pull the balcony in the direction of the arrows until it comes free, after cleaning, reposition it.

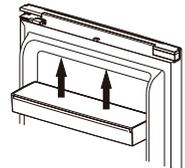


## Daily Use

---

### Disassemble the bottom drawer

1. Pull out the bottom drawer to stopper position.
2. Push up the elastic buckles on both sides of the bottom drawer.
3. Pull out the bottom drawer.

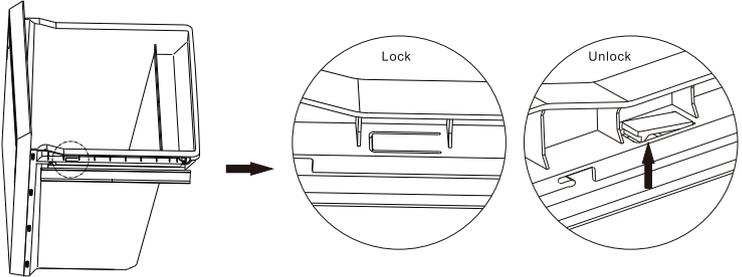

### Helpful hints and tips

#### Hints for freezing

To help you make the most of the freezing process, here are some important hints:

- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required;
- wrap up the food in aluminium foil or polythene and make sure that the packages are airtight;
- do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter;
- lean foods store better and longer than fatty ones; salt reduces the storage life of food;
- water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

#### Hints for storage of frozen food

To obtain the best performance from this appliance, you should:

- make sure that the commercially frozen foodstuffs were adequately stored by the retailer;
  - be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time;
  - not open the door frequently or leave it open longer than absolutely necessary.
- Once defrosted, food deteriorates rapidly and cannot be refrozen.  
Do not exceed the storage period indicated by the food manufacture.

### Cleaning

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.



**Caution!** The appliance may not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse. Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapors can lead to the damage of plastic parts. The appliance must be dry before it is placed back into service.

## Daily Use

**Important!** Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker of fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- After everything is dry place appliance back into service.

## Replace the lamp

The internal light is a LED type. To replace the lamp, please contact qualified technician.

## Troubleshooting



**Caution!** Before troubleshooting, disconnect the power supply. Only a qualified electrician of competent person must do the troubleshooting that is not in this manual.

**Important!** There are some sounds during normal use (compressor, refrigerant circulation).

Problem	Possible cause	Solution
Appliance does not work	Mains plug is not plugged in or is loose	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Mains malfunctions are to be corrected by an electrician.
Appliance freezes too much	Temperature is set too cold or the appliance runs at <b>SUPER</b> mode.	Set temperature warmer.
The food is not frozen enough.	Temperature is not properly set.	Please look in the initial Temperature Setting section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Heavy build-up of frost on the door seal.	Door seal is not air-tight.	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed door seal by hand such that it sits correctly.
Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.

If the malfunction shows again, contact the Service Center. These data are necessary to help you quickly and correctly. Write the necessary data here, refer to the rating plate.

# Safety and General Use

**Safety Precautions:** Follow manual instructions to avoid mistakes and accidents. Not suitable for children under 8 without supervision. For appliance disposal, cut the cable and remove the door to prevent accidents.

**Installation Warnings:** Keep ventilation clear. Avoid using mechanical devices for defrosting other than those recommended. Ensure the refrigerant circuit is not damaged.

**Using the Appliance:** Do not store explosive substances or use unauthorized electrical devices inside. Avoid touching light bulbs when hot.

# Daily Use and Maintenance

**Operational Safety:** Do not re-freeze thawed food. Follow manufacturer's storage instructions and avoid contaminating food. Do not place carbonated drinks in the freezer.

**Care and Cleaning:** Disconnect appliance before cleaning. Avoid metal objects for cleaning and sharp objects for defrosting. Regularly clean the drain.

## Installation and Energy Saving

**Setting Up:** Wait four hours before connecting to allow oil flow in the compressor. Ensure good air circulation and do not place near heat sources.

**Appliance Positioning:** Position away from heat and ensure the power plug is accessible post-installation. Avoid trapping or damaging the supply cord. Keep the appliance level to ensure proper operation.

**Environment Considerations:** Install the appliance in a location where the ambient temperature corresponds to the climate class indicated on the appliance's rating plate. The appliance operates optimally within a temperature range of 16°C (61°F) to 32°C (90°F).

**Service:** Require qualified personnel for electrical work and use only genuine spare parts.

**Energy Efficiency:** Avoid placing hot food in the appliance, ensure food does not obstruct air circulation, and don't set overly cold temperatures.



## Installation and Energy Saving

**Eco-friendly Practices:** The appliance is free from ozone-damaging gases. Dispose of according to local regulations and avoid damaging the cooling unit. The appliance and parts are recyclable.



# Installation

---


7. Unscrew and move the top hinge pin from bottom side to upper side. Remove door switch from right hinge cover and then install it in left hinge cover which is placed in accessory bag.

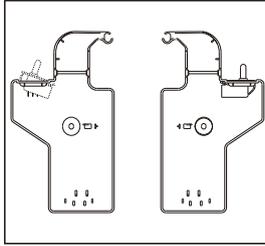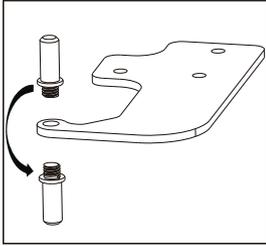



8. Unscrew and move the top decorative cover on the left side, and install it on the right side.

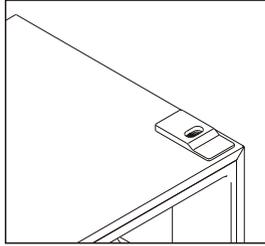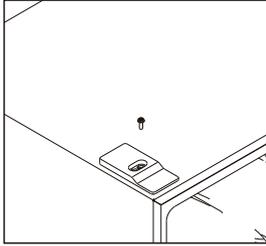

9.

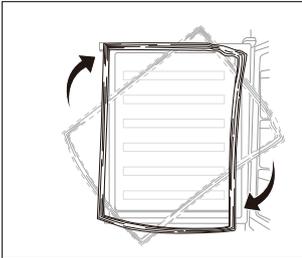


10. Install the door, and then move the connecting wires from right side to left side.

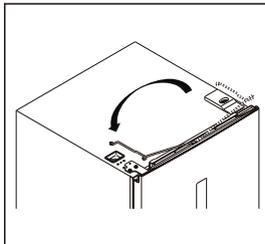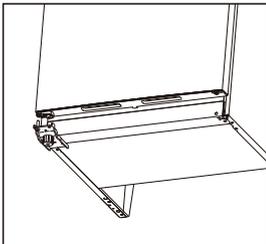



# Installation

---



11. Install the top hinge to the left side, please slightly adjust the top hinge while installing to make sure gasket is well sealed.

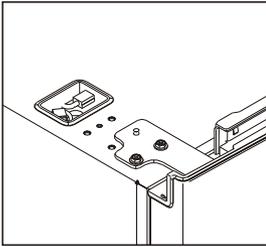

12. Connect connectors of door switch and display, and install the left top hinge cover.

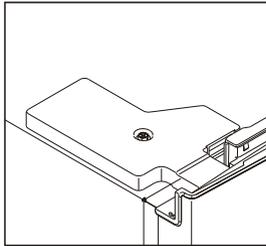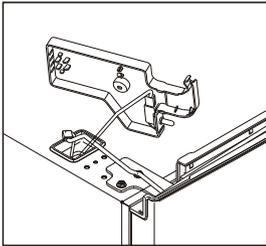

13. Install the upper wire box covers to the right side.

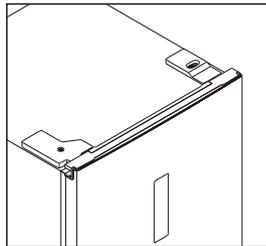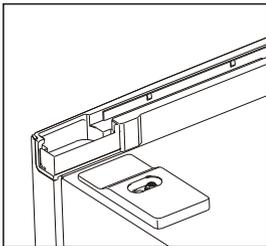



Sort as  
cardboard and  
plastic

Imported by iiglo | Østre Kullerød 4,  
N-3241 Sandefjord, Norway  
[www.iiglo.com](http://www.iiglo.com) | Made in China

**iiglo**<sup>®</sup>